

Congratulations on your recent purchase of the Enbrighten Café Lights. Enbrighten Café Lights are designed to provide lighting for life with no bulbs to replace ever again! Purchase additional lights to form one continuous string up to 750 feet!

IMPORTANT: Before installation, please read all the warning statements included on the reverse side of these instructions.

 
 
In order to ensure proper installation, please follow each step below:

Step 1 - INITIAL SETUP

- 1 - Carefully unpack Café Lights from box. Remove the wire ties (see warning on reverse side).
- 2 - When installing Café Lights outside, a Ground Fault Circuit Interrupter (GFCI) receptacle should be used. Before installing, plug the Café Lights into the GFCI receptacle to ensure all lights work properly. IMPORTANT: Unplug the Café Lights prior to mounting.

Step 2 - INSTALLING CAFÉ LIGHTS

- 1 - IMPORTANT: Only mount Café Lights to a solid support structure such as joists, beams, studs or other solid mounting surfaces.
- 2 - Each Café Light is designed with a universal keyhole for mounting with lights hanging downward. Hardware options include screws, nails, zip ties, hooks and more (not included).
- 3 - Guide wires in compliance with local electrical and building codes may also be used to support the Café Lights.
- 4 - Once appropriate GFCI outlet location, mounting surface and hardware are determined, mount your Café Lights.
- 5 - When finished mounting, plug the male plug into the GFCI Receptacle and place the female receptacle cover firmly over the unused outlet.

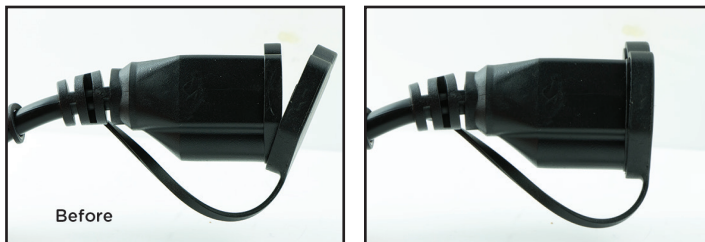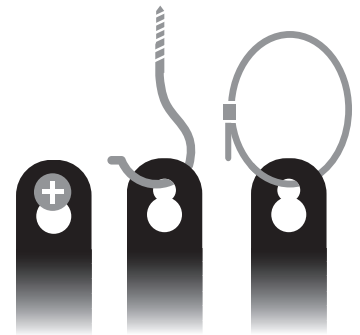

Step 3 - INSTALLING MULTIPLE CAFÉ LIGHT SETS

Extend the length of your lights by connecting more than one strand together to form one continuous string up to 750 feet! Simply follow the above installation steps making sure each connection between strands is secure and the end female receptacle is securely covered using the receptacle cover when done.

Step 4 - REMOVING CAFÉ LIGHTS

- 1 - Always unplug Café Lights from their receptacle prior to removing.
- 2 - Carefully remove each light individually from the mounting hardware.
NOTE: For your safety, never pull or jerk lights from mounting hardware.
- 3 - Store lights in a dry location.

Available in multiple lengths at www.cafelights.com

Length, feet	Bulbs	Model Number
12	6	31660
18	9	33307
24	12	31662
24	8	32143
36	18	31663
36	18	33171
48	24	31664

See reverse side for electrical rating

SAVE THESE INSTRUCTIONS

enbrighten[®] café

Simplify your Café Light experience by automating your on and off light times.

We recommend the following models available at your local retailer or at www.cafelights.com:

GE myTouchSmart Outdoor
Timer (Plug-in)
Model #26898



The GE myTouchSmart plug-in timer is the easiest to set timer on the market. Simply select your time and go.

GE myTouchSmart
Timer (In-wall)
Model #26893



The GE myTouchSmart In-Wall Timer provides easy-set controls if your receptacle is controlled by a switch.

GE Bluetooth Outdoor
Smart Switch (Plug-in)
Model #13868



Wirelessly schedule and control outside lights or other devices from your smartphone or tablet.

GE Bluetooth
Smart Switch (In-wall)
Model #13869



The GE Bluetooth In-Wall version provides the same Bluetooth control if your receptacle is controlled by a switch.

Important — please read:

Refer to the manual or visit www.byjasco.com for limitations and restrictions on warranties and the product registration information.

⚠ WARNING: When using outdoors use portable luminaires, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and personal injury, including the following:

- Use only three-wire outdoor extension cords that have three-prong grounding plugs and grounding receptacles that accept the appliance's plug.
- Ground Fault Circuit Interrupter (GFCI) protection is to be provided on the circuit(s) or outlet(s) to be used for the wet location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.
- Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOOW, SJW, SJOW, SJOOW, SJTW, SJTOW, or SJTOOW.

⚠ WARNING: Keep these bags away from babies and children. Do not use in cribs, beds, carriages, or playpens. The thin film may cling to nose and mouth and prevent breathing.

NOTE: Ensure the Café Light's receptacle cover is firmly installed and well seated when not being used to connect additional strings.

Warranty Information: This Jasco product is warrantied for three (3) years with a limited-lifetime replacement warranty on Enbrighten LED light source only.

Electrical Ratings
Input: 120 V, 50/60 Hz

Model No.	Input watt, Max.	Location Use
CLRB/*/6/*/*	6W	Wet
CLRB/*/9/*/*	9W	
CLRB/*/12/*/*	12W	
CLRB/*/18/*/*	17W	
CLRB/*/24/*/*	23W	
CLRB/*/3/*/*	3W	
CLRB/*/4/*/*	4W	
CLRB/*/8/*/*	8W	
CLRB/*/16/*/*	15W	

MADE IN CHINA / HECHO EN CHINA
DISTRIBUTED BY JASCO PRODUCTS
COMPANY LLC, 10 E. MEMORIAL RD.,
OKLAHOMA CITY, OK 73114.

Patents pending
Questions? Contact us at 1-800-654-8483
between 7:00AM—8:00PM CST.

BY
JASCO[®]



⚠ WARNING

RISK OF ELECTRIC SHOCK

- RECEPTACLE OUTLETS USED FOR POWERING CAFÉ LIGHTS SHALL COMPLY WITH ALL NATIONAL AND LOCAL ELECTRICAL CODES. CONSULT LOCAL ELECTRICIAN IF UNSURE OF COMPLIANCE REQUIREMENTS.
- FOR USE ONLY ON GFCI PROTECTED CIRCUITS.
- DO NOT SUBMERSE.
- DO NOT USE AROUND AQUARIUMS.
- CAFÉ LIGHTS ARE A WET LOCATION PRODUCT AND HAVE NO SERVICEABLE PARTS.
- DO NOT USE WITH EXTENSION CORD NEAR WATER OR WHERE WATER MAY ACCUMULATE.
- KEEP LAMPS AT LEAST 16 FEET FROM POOLS AND SPAS.
- KEEP PLUGS AND RECEPTACLES DRY.
- AVOID DAMAGE TO THE CORDS AND LAMP ASSEMBLIES DURING INSTALLATION. PERIODICALLY INSPECT THE CAFÉ LIGHTS FOR PHYSICAL DAMAGE OR OTHER DAMAGE CAUSED BY OUTDOOR EXPOSURE TO THE ELEMENTS.
- REPLACE ANY DAMAGED CAFÉ LIGHT STRINGS.
- DO NOT INSTALL IN LOCATIONS WHERE CAFÉ LIGHTS CAN BE STEPPED ON.
- ENSURE CAFÉ LIGHTS ARE UN-PLUGGED FROM POWER DURING INSTALLATION.
- CAFÉ LIGHTS SHOULD BE INSTALLED OUT OF THE REACH OF CHILDREN OR NOT ALLOWING CHILDREN TO PLAY WITH THEM.
- UL RECOMMENDS TESTING GFCI CIRCUITS AND RECEPTACLES EVERY MONTH TO ENSURE PROPER OPERATION.
- DO NOT OPERATE WITHOUT BULB SECURELY SCREWED IN.

RISK OF FIRE

- CAFÉ LIGHTS ARE DESIGNED TO BE MOUNTED WITH THEIR INDIVIDUAL KEYHOLE MOUNTING FEATURE. DO NOT MOUNT CAFÉ LIGHTS BY USING THE MAIN ELECTRICAL CORD OR THE INDIVIDUAL DROP CORDS.
- CAFÉ LIGHTS ARE DESIGNED TO BE LINKED BY USING THEIR ELECTRICAL PLUGS AND RECEPTACLES TO A MAXIMUM DISTANCE OF 750 FEET.
- CAFÉ LIGHT INTERCONNECTING RECEPTACLES ARE INTENDED ONLY FOR THE LINKING OF COMPATIBLE CAFÉ LIGHT STRINGS. DO NOT USE CAFÉ LIGHT RECEPTACLES FOR ANY OTHER ELECTRICAL PURPOSE.
- DO NOT MOUNT CAFÉ LIGHTS IN ANY POSITION WHERE THE BULB IS FACING UP.
- DO NOT ALLOW THE LED LAMP ASSEMBLIES TO BE IN CONTACT WITH COMBUSTIBLE MATERIALS. LED LAMP ASSEMBLIES SHOULD HANG FREELY AND NOT BE SUSCEPTIBLE TO REPETITIVE DAMAGE CAUSED BY ENVIRONMENTAL CONDITIONS SUCH AS WIND, RAIN, AND ICE.
- NOT INTENDED FOR INSTALLATION IN CEILING, SOFFITS, CABINETS, ATTICS, OR OTHER ENCLOSED SPACES.