

LED Mini Lantern


READ IT OR WATCH IT




Read instructions or watch
easy-to-follow video. Scan QR code
or visit <http://bit.ly/351NYMk>

Battery Installation:


The lantern is operated with 4 AA batteries (not included). Batteries must be installed or replaced in sets of four. **NOTE:** If replacing the batteries, remove the old batteries and follow the instructions below.

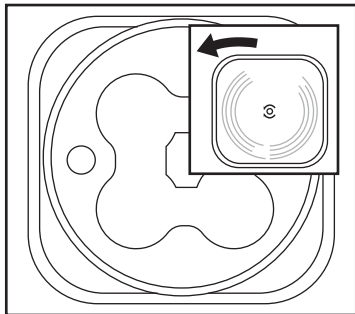

1. Turn the lantern over and remove the battery cover by twisting the cap counterclockwise.

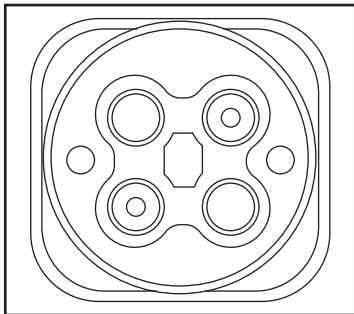


2. To operate the lantern using 4 AA batteries, install noting proper battery polarity.

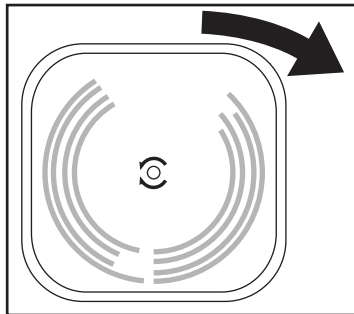


3. Replace the battery cover by fitting the center plastic column within the base and then twisting the cover clockwise until it clicks firmly into place.

Using the latching handle:


- Do not attempt to hang lantern with handle in open position.
- Always be sure to hang the lantern in a safe and secure area.
- Lantern should never be left out in excessive wind.

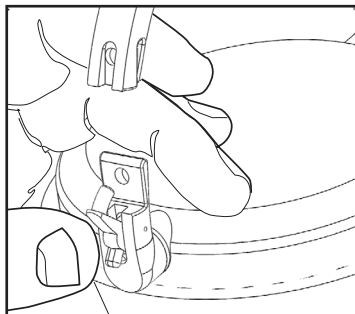

1. To open the handle, depress the raised button near the bottom of the handle.

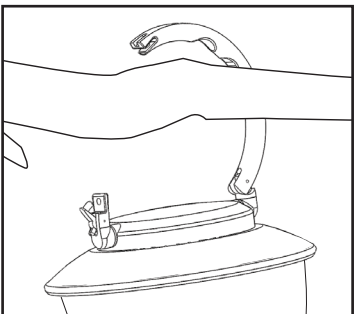

2. Fully open the handle. Close handle around object you wish the lantern to hang from.

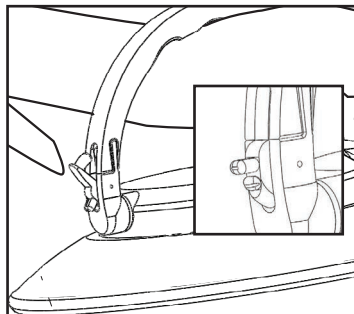

3. Be sure the handle is securely latched before allowing lantern to fully hang on its own.

FCC statement

Suppliers Declaration of Conformity | Model #: 49560 | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, or connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

CAUTION

BATTERIES MAY LEAK HARMFUL LIQUIDS OR IGNITABLE MATERIALS OR EXPLODE CAUSING INJURY OR PRODUCT DAMAGE.

- DO NOT MIX OLD AND NEW OR OTHER BATTERY TYPES
- REPLACE ALL BATTERIES AT THE SAME TIME
- REPLACE FULLY DISCHARGED BATTERIES IMMEDIATELY
- REMOVE BATTERIES IF PRODUCT IS TO BE UNUSED FOR EXTENDED PERIOD OF TIME

MADE IN CHINA

Distributed by Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.

This Jasco product comes with a 5-year limited warranty. Visit www.byjasco.com for details.

Questions? Contact us at 1-800-654-8483 between 7AM-8PM, M-F, Central Time.




byjasco.com/recycle
paper made from 25% post consumer waste


Linterna DEL

Instalación de Baterías:


La linterna es funcionar con 4 pilas AA (no incluido). Las baterías deben ser instaladas o reemplazadas en conjuntos de cuatro. *Nota: si a reemplazar las baterías, retire las pilas viejas y siga las instrucciones siguientes.*

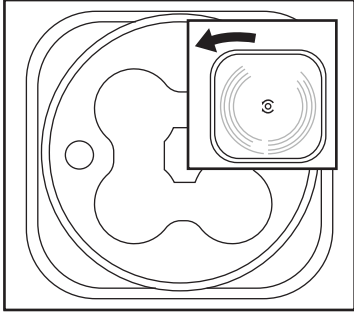

1. Gira la linterna y retira la tapa de la batería girando el contador de tapa en sentido horario.

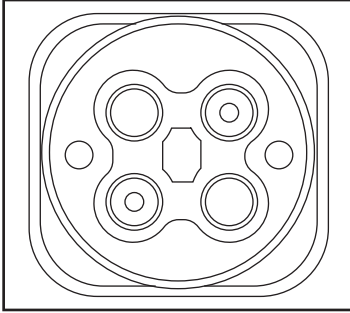


2. Para operar la linterna de celdas de 4 AA llena los cuatro posiciones observando la polaridad de la batería correcta.

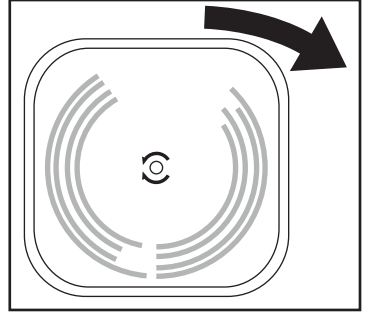


3. Reemplaza la tapa de la batería y giro para cerrar contador de tapa en sentido horario.

Uso del asa con pestillo:


- No intente colgar la linterna con el asa abierta.
- Asegúrese de colgar la linterna en un área segura.
- La linterna nunca debe estar expuesta a mucho viento.

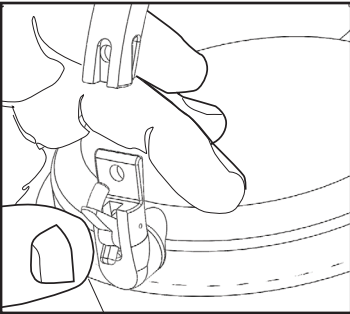

1. Para abrir el asa, oprima el botón saliente cerca de la parte inferior del asa.

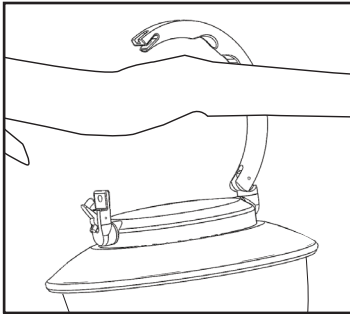

2. Abre completamente el asa. Cierre el asa alrededor del objeto del que desea colgar la linterna.

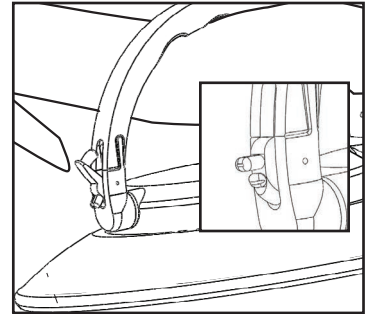

3. Verifique que el asa quede bien cerrada antes de dejar la linterna colgando sin sostenerla.

Declaracion de la FCC:

Declaración de conformidad del proveedor | Modelo #: 49560 | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

Este dispositivo cumple con la Parte 15 de las Normas de la FCC. La operación está sujeta a las siguientes dos condiciones: (1) este dispositivo no puede causar interferencias perjudiciales y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan provocar una operación indeseable.

FCC NOTA: Los cambios o modificaciones a esta unidad que no hayan sido expresamente aprobados por la parte responsable del cumplimiento de las reglas, pueden anular la autoridad del usuario para poder operar el equipo.

NOTA: Este equipo ha sido probado y cumple con los límites para un dispositivo digital de Clase B, de conformidad con la Parte 15 de las Normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencia dañina a la comunicación por radio. Sin embargo, no hay ninguna garantía que no ocurra interferencia en una instalación en particular. Si este equipo causa interferencias perjudiciales a la recepción de radio o televisión, esto se puede comprobar apagando y encendiendo el equipo repetidamente, se le sugiere al usuario tratar de remediar la interferencia tomando una o más de las siguientes medidas: reorientar o reubicar la antena de recepción, aumentar la separación entre el equipo y el receptor, conectar el equipo a un tomacorriente en un circuito distinto de aquel al que está conectado el receptor, o consultar al distribuidor o a un técnico de radio / TV para obtener ayuda.

⚠ PRECAUCION

LAS BATERÍAS PUEDEN DERRAMAR LÍQUIDOS NOCIVOS O MATERIALES INFLAMABLES O ESTALLAR CAUSANDO LESIONES Y DAÑOS AL PRODUCTO

- NO MEZCLE BATERÍAS VIEJAS Y NUEVAS NI TAMPOCO DISTINTOS TIPOS DE BATERÍAS.
- REEMPLACE TODAS LAS BATERÍAS AL MISMO TIEMPO.
- REEMPLACE LAS BATERÍAS TOTALMENTE DESCARGADAS INMEDIATAMENTE.
- QUITÉ LAS BATERÍAS SI EL DISPOSITIVO NO VA A SER UTILIZADO POR UN TIEMPO LARGO.

HECHO EN CHINA

Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.

Este producto de Jasco tiene una garantía limitada de 5 Años. Visite www.byjasco.com para detalles.

¿Tiene preguntas? Comuníquese al 1-800-654-8483 entre las 7:00 a. m. y las 8:00 p. m. CST (hora central estándar).